




Aluminum Horizontal Shores

WT. PER LINEAL FOOT: 4 LBS.

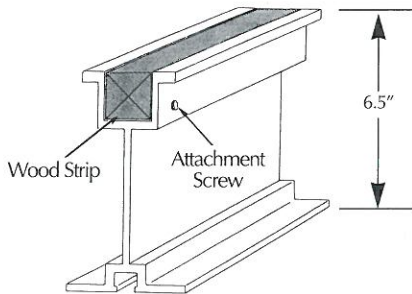


ALUMINUM JOIST

ALUMINUM JOIST

Span	Allowable Deflection (inches)	Simple Span (lbs./ft.)
4'0"	0.13	3080R
4'6"	0.15	2740R
5'0"	0.17	2020*
5'6"	0.18	1510*
6'0"	0.20	1160*
6'6"	0.22	920*
7'0"	0.23	730*
7'6"	0.25	595*
8'0"	0.27	490*
8'6"	0.28	405*
9'0"	0.30	345*
9'6"	0.32	295*
10'0"	0.33	250*
$\Delta = L/360$		

Beam Load Span Table

R = Reaction Governs
* = Deflection Governs

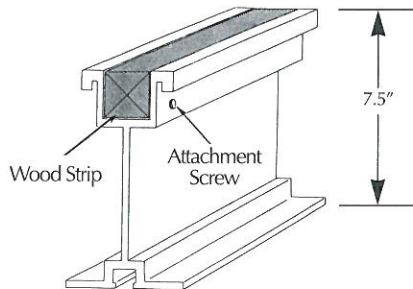

ALUMINUM STRINGER BEAM


ALUMINUM STRINGER BEAM

WT. PER LINEAL FOOT: 5.2 LBS.

Span	Allowable Deflection (inches)	Simple Span (lbs./ft.)
4'0"	0.13	4050R
4'6"	0.15	3600R
5'0"	0.17	3240R
5'6"	0.18	2950R
6'0"	0.20	2333*
6'6"	0.22	1840*
7'0"	0.23	1465*
7'6"	0.25	1195*
8'0"	0.27	990*
8'6"	0.28	810*
9'0"	0.30	690*
9'6"	0.32	590*
10'0"	0.33	490*
$\Delta = L/360$		

Stringer Load Span Table

R = Reaction Governs
* = Deflection Governs

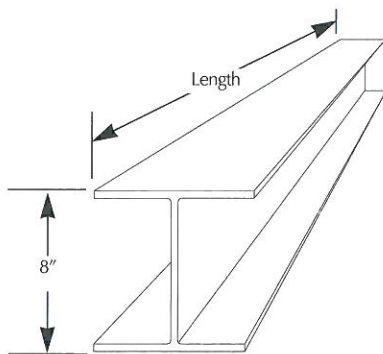

STEEL JUNIOR BEAM

W8X10 STEEL BEAM

WT. PER LINEAL FOOT: 10 LBS.

Guidelines for safe practices for Erecting & Dismantling of Frame Shoring*

It shall be the responsibility of all employers and users to read and comply with the following common sense guidelines which are designed to promote safety in the erection, dismantling and use of frame shoring. These guidelines are not all inclusive nor do they supplant or replace other additional safety and precautionary measures to cover usual or unusual conditions. If these guidelines conflict in any way with any state, local or federal statute or governmental regulation, said statute or regulation shall supersede these guidelines and it shall be the responsibility of each employee and user to comply therewith and also to be knowledgeable and understand all state, local or federal statutes or governmental regulations pertaining to frame shoring.

I. GENERAL GUIDELINES

- A. POST THESE SHORING SAFETY GUIDELINES in a conspicuous place and be sure that all persons who erect, dismantle or use shoring are aware of them.
- B. FOLLOW ALL STATE, LOCAL AND FEDERAL CODES, ORDINANCES AND REGULATIONS pertaining to shoring.
- C. SURVEY THE JOB SITE. A survey by a qualified person shall be made of the job site for hazards, such as untamped earth fills, ditches, debris, high tension wires, unguarded openings, and other hazardous conditions. These conditions should be corrected or avoided as noted in the following sections.
- D. PLAN SHORING ERECTION SEQUENCE in advance and obtain necessary access equipment to accomplish the work.
- E. INSPECT ALL EQUIPMENT BEFORE USING. Never use any equipment that is damaged or defective in any way. Mark it or tag it as defective. Then remove it from the job site.
- F. A SHORING DRAWING prepared by a person qualified to analyze the loading intended and consistent with the manufacturer's recommended safe working loads, shall be used on the job at all times.
- G. ERECT, DISMANTLE OR ALTER SHORING only under the supervision of a qualified person.
- H. DO NOT ABUSE OR MISUSE THE SHORING EQUIPMENT.
 - I. INSPECT ERECTED SHORING: (a) immediately prior to concrete placement; (b) during concrete placement and while vibrating concrete, and (c) after concrete placement until concrete is set.
- J. NEVER TAKE CHANCES! IF IN DOUBT REGARDING THE SAFETY OR USE OF THE SHORING, CONSULT YOUR SHORING SUPPLIER.
- K. USE SHORING EQUIPMENT only for the purposes or in ways for which it was intended. Use proper tools when installing equipment.
- L. ERECTING AND DISMANTLING OF SHORING requires good physical condition. Do not work on shoring if you feel dizzy, unsteady in any way or are impaired in any way by drugs or any other substances.

GUIDELINES FOR ERECTION AND USE OF SHORING

- A. PROVIDE AND MAINTAIN A SOLID FOOTING. The sills or cribbing for shoring shall be sound, rigid and capable of carrying the maximum design load without setting or moving.
- B. ALWAYS USE BASE PLATES. When sills or cribbing are used, base plates must be centered on them.
- C. ADJUSTING SCREWS SHALL BE USED to adjust to uneven grade conditions. Maintain all screw adjustments within the recommended height for the design load.
- D. PLUMB AND LEVEL ALL SHORING FRAMES as the erection proceeds. DO NOT force braces on frames - level the shoring towers until proper fit can be made. Maintain all shoring towers plumb and level.
- E. MAINTAIN THE SHORE FRAME SPACINGS OR TOWER HEIGHTS as shown on the shoring drawing. Where jobsite conditions require deviations from the shoring drawing, consult a qualified person.
- F. IF MOTORIZED CONCRETE EQUIPMENT is to be used, be sure that the shoring layout has been designed for use with this equipment and such fact is noted on the layout.
- G. USE CAUTION WHEN ERECTING FREE-STANDING TOWERS. Prevent tipping by guying or bracing when height exceeds 4 times the minimum base dimension.
- H. GIVE SPECIAL CONSIDERATION TO TEMPORARY LOADING. Areas where re-bar, material or equipment is to be stored temporarily may need to be strengthened to meet these loads.

- I. DO NOT CLIMB CROSS BRACES. Use proper access equipment.
- J. USE SPECIAL PRECAUTIONS when shoring form or to sloped surfaces.
- K. USE ADJUSTMENT DEVICE ON TOP OF LEG to position the falsework - not the bottom adjusting screw.
- L. SHORING LOADS ARE INTENDED TO BE CARRIED BY VERTICAL LEGS. Horizontal loading may require special consideration. Consult your shoring supplier for allowable loads on horizontal members.
- M. AVOID ECCENTRIC LOADS on U-heads, top plates and similar members by centering stringer loads on those members.

GUIDELINES FOR DISMANTLING SHORING

- A. DO NOT REMOVE BRACES OR BACK OFF ON ADJUSTMENT SCREWS until proper authority is given.
- B. DISMANTLED EQUIPMENT should be stockpiled in a planned manner and distributed to avoid concentrated loads on the partially cured concrete.
- C. USE PROPER ACCESS EQUIPMENT in the dismantling process.

RESHORING

- A. RESHORING PROCEDURE should be approved by a qualified professional engineer.

Reprinted from the Scaffold Industry Association.

*These guidelines set forth some common sense procedures for safely erecting, dismantling and using frame shoring equipment. Since equipment and shoring systems differ, reference must always be made to the instructions and procedures of the supplier and/or manufacturer of the equipment. Since field conditions vary, and are beyond the control of the Scaffolding, Shoring & Forming Institute and Scaffold Industry Association, safe and proper use of equipment is the sole responsibility of the employer and user.

EDC

3 EUCKER STREET

RIDGEFIELD PARK, NEW JERSEY 07660

It is the responsibility of users of Engineered Devices Corporation equipment to identify and comply with the requirements of all applicable codes and regulations.